


ElastaHyde Applications
 3 Course of #800 Elastic Cement and Polyester Fabric
 Polyester Fabric
 #298 Emulsion intermediate coat
 Polyester Fabric
 Fill coat of #298 Emulsion
 Gravel cut back 2"
 Existing Gravel Stop

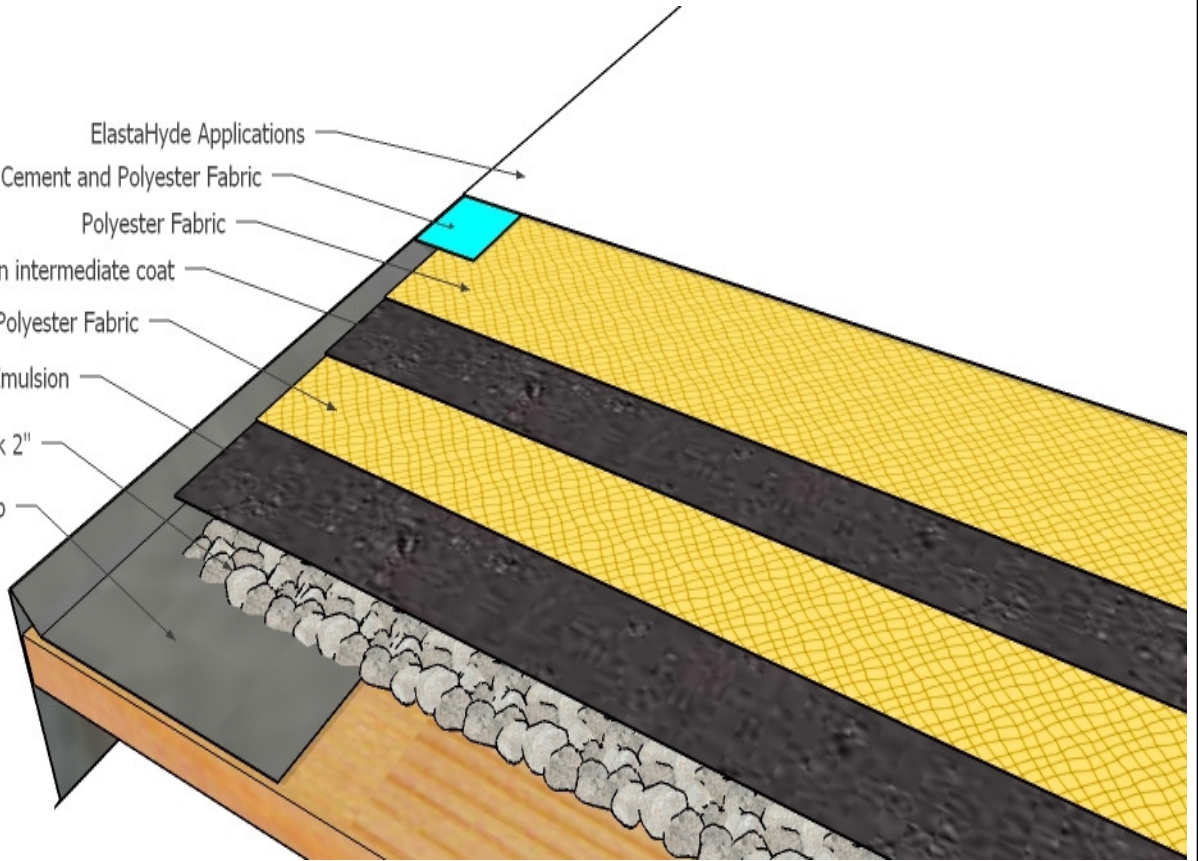

Scale: NONE

NOTES:

1. Once the membrane system has been installed per detail SMGR-2P-22-XE the membrane termination may be addressed.
2. Remove any loose or flaking materials from the gravel drip edge and ensure that there is no residual oils present on the new membrane.
3. Detail the termination to flashing transition with a 4" application of #800 and polyester membrane per detail DP-3CRS.
4. When detailing be sure to extend the polyester a minimum of 2" onto both substrates feathering the edges.
5. Encapsulate the detail work with the applications of ElastaHyde following full cure for best results.

**This Detail is intended for conceptual purposes only.*



DETAIL DESCRIPTION:

Roof Edge-Gravel Stop

ISSUE DATE:

12/29/2014

DETAIL NUMBER:

SD-RE3